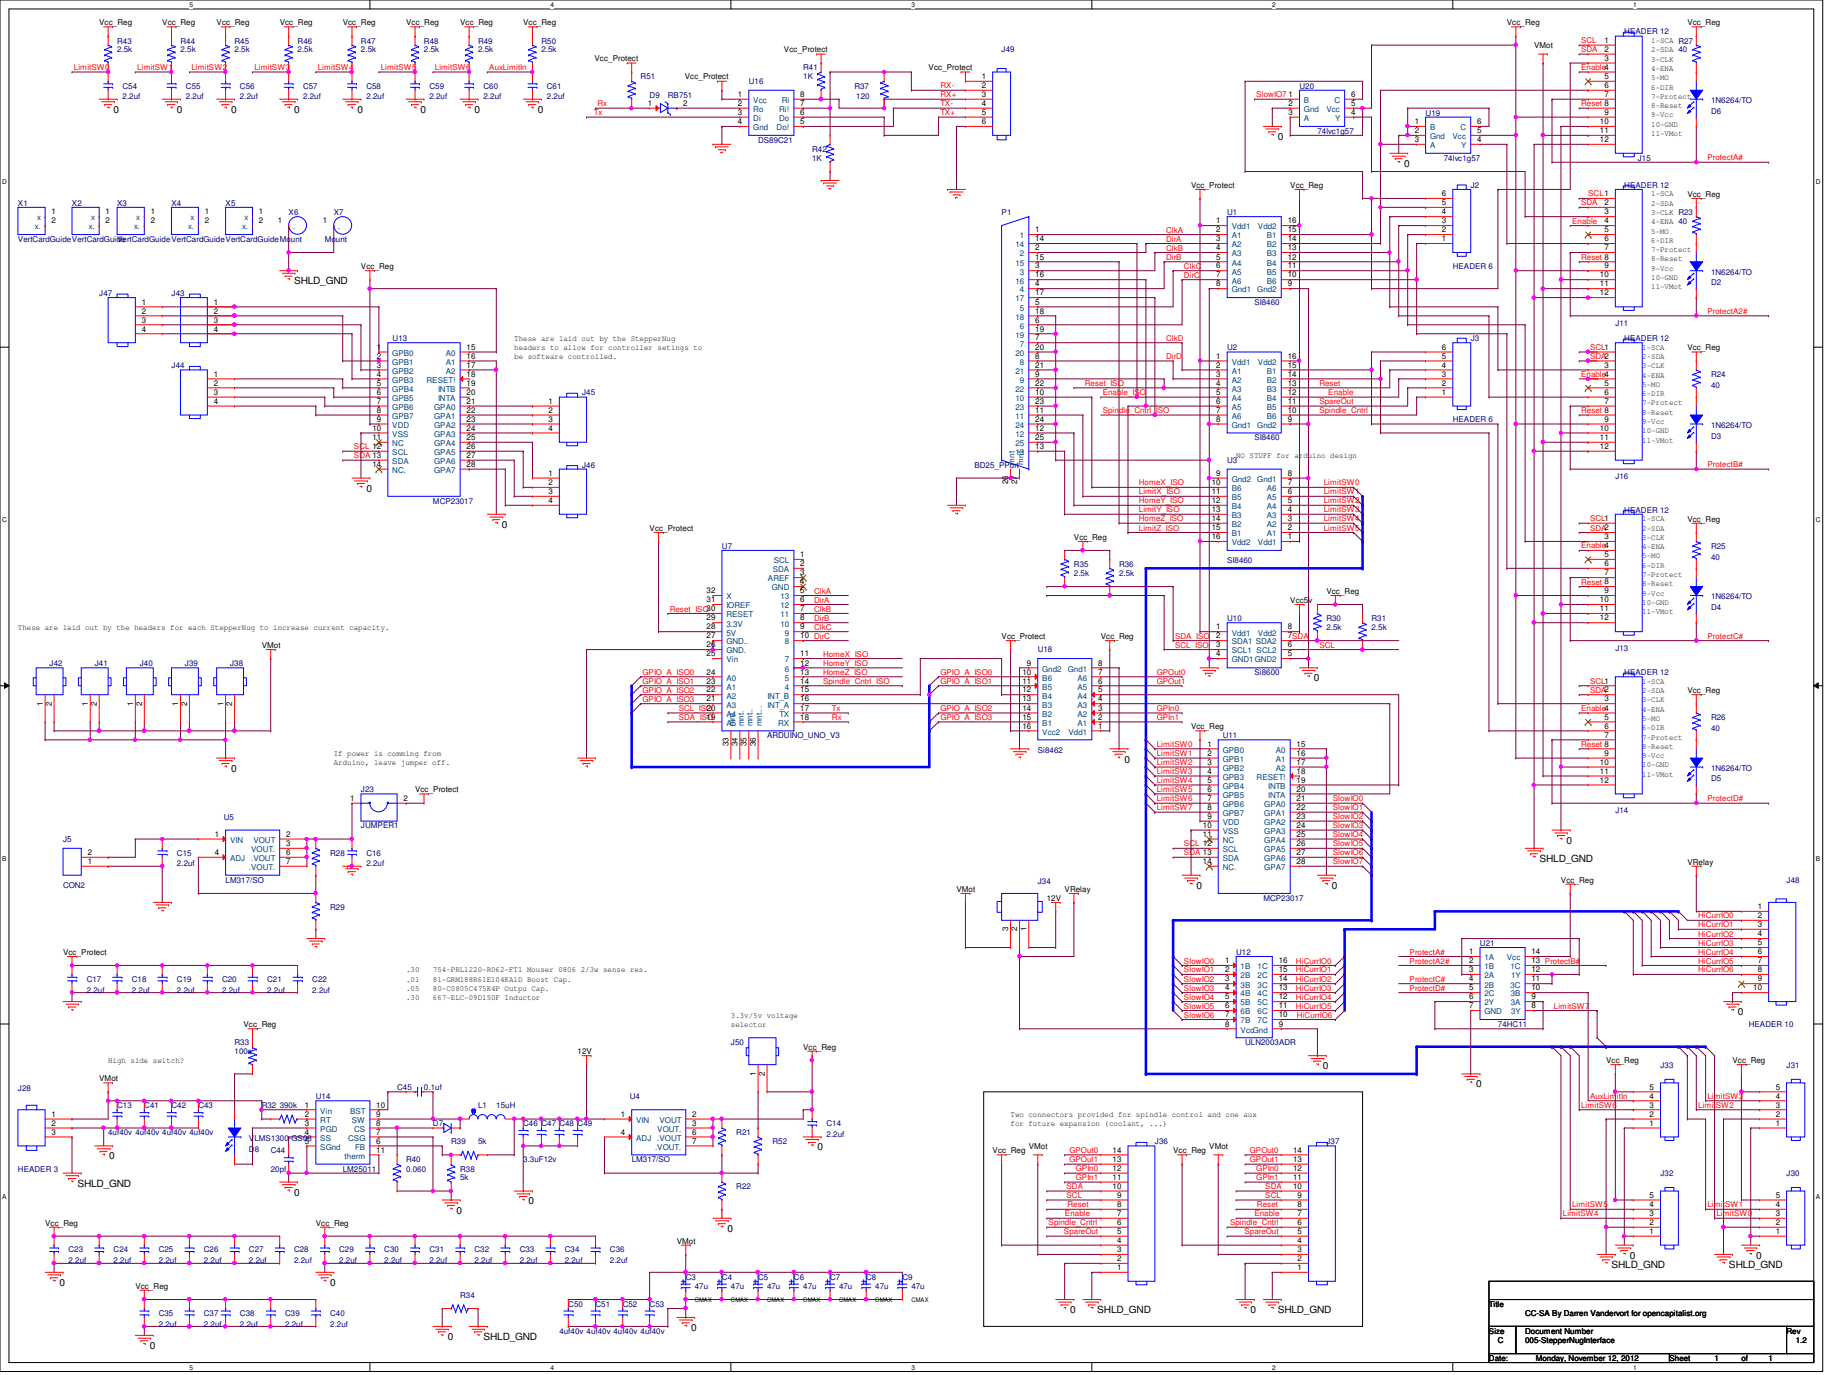
These are laid out by the StepperNug headers to allow for controller settings to be software controlled.
These are laid out by the headers for each StepperNug to increase current capacity.
If power is comming from Arduino, leave jumper off.
NO STUFF for Arduino design
Two connectors provided for spindle control and one aux for future expansion (coolant, ...)
High side switch?
3.3v/5v voltage selector
.30 754-PRL1220-R062-FT1 Mouser 0806 2/3w sense res.
.01 81-GRM188R61E104KA12 Bocst Cap.
.05 80-C0805C475K4P Outpu Cap.
.30 667-ELC-09D150F Inductor
Title
CC-SA By Darren Vandervort for opencapitalist.org
Size C
Document Number 005-StepperNugInterface
Rev 1.2
Date: Monday, November 12, 2012
Sheet 1 of 1