

Performance Rated I-Joists



WOOD

The Natural Choice



Engineered wood products are a good choice for the environment. They are manufactured for years of trouble-free, dependable use. They help reduce waste by decreasing disposal costs and product damage. Wood is a renewable resource that is easily manufactured into a variety of viable products.

A few facts about wood.

- **We're growing more wood every day.** Forests fully cover one-third of the United States' and one-half of Canada's land mass. American landowners plant more than two billion trees every year. In addition, millions of trees seed naturally. The forest products industry, which comprises about 15 percent of forestland ownership, is responsible for 41 percent of replanted forest acreage.



That works out to more than one billion trees a year, or about three million trees planted every day. This high rate of replanting accounts for the fact that each year, 27 percent more timber is grown than is harvested. Canada's replanting record shows a fourfold increase in the number of trees planted between 1975 and 1990.



- **Life Cycle Assessment shows wood is the greenest building product.**

A 2004 Consortium for Research on Renewable Industrial Materials (CORRIM) study gave scientific validation to the strength of wood as a green building product. In examining building products' life cycles – from extraction of the raw material to demolition of the building at the end of its long lifespan – CORRIM found that wood was better for the environment than steel or concrete in terms of embodied energy, global warming potential, air emissions, water emissions and solid waste production. For the complete details of the report, visit www.CORRIM.org.

- **Manufacturing wood is energy efficient.**

Wood products made up 47 percent of all industrial raw materials manufactured in the United States, yet consumed only 4 percent of the energy needed to manufacture all industrial raw materials, according to a 1987 study.

Material	Percent of Production	Percent of Energy Use
Wood	47	4
Steel	23	48
Aluminum	2	8



- **Good news for a healthy planet.** For every ton of wood grown, a young forest produces 1.07 tons of oxygen and absorbs 1.47 tons of carbon dioxide.

Wood: It's the natural choice for the environment, for design and for strong, lasting construction.

14" PRI™-40

SPACING	12" oc	16" oc	19.2" oc	24" oc
SIMPLE SPAN	24'-4"	22'-1"	20'-2"	18'-0"
MULTIPLE SPAN	25'-6"	22'-1"	20'-1"	18'-0"

APA EWS
Performance Rated Wood Joists
for Steel Decking in Floors
WLL 1000 – P10-400

NOTICE:

The technical data contained in this guide applies to I-joists that bear the APA Performance Rated I-Joist (PRI™) trademark. These trademarked products, manufactured by APA member mills, adhere to our quality assurance program and conform to PRI-400, "Performance Standard for APA EWS I-Joists."

APA PERFORMANCE RATED™ I-JOISTS PROVIDE QUALITY CHOICE FOR RESIDENTIAL FLOORS

APA Performance Rated™ I-Joists (PRI™) provide a high-performance alternative to dimension lumber joists for residential floor applications. This guide will help you use APA PRIs efficiently by walking you through the simple steps of product selection, specification and installation.

The APA EWS trademark signifies that the I-joist manufacturer is committed to the strict quality standards of APA, and that PRIs are manufactured in conformance with PRI-400, *Performance Standard for APA EWS I-Joists*. APA's rigorous program of quality verification and testing is designed to assure consistent and reliable product performance.

PRI-400 brings product standardization while providing for a multitude of design and construction situations. The standard provides design information for numerous types and sizes of I-joists. Now specifiers and builders can select and use I-joists from various APA member manufacturers, using just one set of design and installation criteria. Because PRIs can be selected based on their allowable span for uniformly loaded glue-nailed residential floors, it is easy to incorporate them into your design.

While this guide emphasizes residential floor systems, much of the basic design information can be used for other construction applications. Review by a design professional is required for applications beyond the scope of this document. (See Table 7 for design properties.)

Simple to specify. Easy to install. APA Performance Rated I-Joists are the right choice for residential floor construction.

SAMPLE TRADEMARK – Position of trademark on I-joist may vary by manufacturer

The I-joist alternative to 2 x 10 lumber with a net depth of 9-1/2". Also available in depths of 11-7/8", 14" and 16".

Joist designation

The on-center spacing of the I-joists (optional)



Identifies I-joists as being manufactured in conformance with APA Standard PRI-400, *Performance Standard for APA EWS I-Joists*

The residential floor clear span that can be achieved for a glue-nailed floor system at the indicated spacing for a live load of 40 psf and a dead load of 10 psf (optional)

Plant number

Conforms with APA Standard *Performance Standard for APA EWS I-Joists*

SELECTING APA PERFORMANCE RATED I-JOISTS

Product Description

The APA Performance Rated I-Joist (PRI) is an "I"-shaped engineered wood structural member designed for use in residential floor construction. The product is prefabricated using sawn or structural composite lumber flanges and wood structural panel webs, bonded together with exterior-type adhesives. In order to be classified as an APA PRI, the joist is limited to a $L/480$ live load maximum deflection (where L = span) for glue-nailed residential floor applications, a criteria which provides superior floor performance.

APA Performance Rated I-Joists are identified by their depth followed by a joist designation, such as PRI-30, which has unique design properties.

APA PRIs are manufactured to strict tolerances with the following characteristics:

- **Flanges** are either sawn lumber or structural composite lumber, such as LVL. The top flange is of the same type and grade of material as the bottom flange. The net flange size depends on the joist series.
- **Webs** consist of wood structural panels, which can be plywood or OSB. All panels are classified as Exposure 1 or Exterior and are 3/8 inch or greater in thickness.
- All PRIs are assembled using exterior-type, heat-durable **adhesives** per ASTM D 2559 and D 7247.
- APA PRIs are available in four depths: 9-1/2, 11-7/8, 14 and 16 inches.
- PRIs of the same depth are manufactured with various flange widths; flange width is an important design consideration when specifying hangers.
- Most mills supply I-joists to distributors and dealers in lengths up to 60 feet. These are then cut to frequently used lengths, such as from 16 to 36 feet in 2-foot increments for jobsite delivery. Check your local supplier for availability.

TABLE 1

ALLOWABLE SPANS FOR APA EWS PERFORMANCE RATED I-JOISTS – Simple Span Only^{(a)(b)(c)(d)(e)}

Depth	Joist Designation	Simple Spans On Center Spacing			
		12"	16"	19.2"	24"
9-1/2"	PRI-20	16'-7"	15'-2"	14'-4"	13'-5"
	PRI-30	17'-1"	15'-8"	14'-10"	13'-10"
	PRI-40	18'-0"	16'-5"	15'-6"	14'-6"
	PRI-50	17'-10"	16'-4"	15'-5"	14'-5"
	PRI-60	18'-11"	17'-4"	16'-4"	15'-3"
11-7/8"	PRI-20	19'-10"	18'-2"	17'-2"	16'-0"
	PRI-30	20'-6"	18'-9"	17'-8"	16'-6"
	PRI-40	21'-5"	19'-7"	18'-6"	16'-8"
	PRI-50	21'-4"	19'-6"	18'-5"	17'-2"
	PRI-60	22'-7"	20'-8"	19'-6"	18'-2"
	PRI-70	23'-0"	21'-0"	19'-10"	18'-6"
	PRI-80	24'-11"	22'-8"	21'-4"	19'-10"
	PRI-90	25'-8"	23'-4"	22'-0"	20'-5"
	PRI-40	24'-4"	22'-3"	20'-6"	18'-4"
14"	PRI-50	24'-4"	22'-2"	21'-0"	19'-7"
	PRI-60	25'-9"	23'-6"	22'-2"	20'-8"
	PRI-70	26'-1"	23'-10"	22'-6"	20'-11"
	PRI-80	28'-3"	25'-9"	24'-3"	22'-7"
	PRI-90	29'-1"	26'-5"	24'-11"	23'-2"
16"	PRI-40	26'-11"	24'-3"	22'-1"	19'-9"
	PRI-50	27'-0"	24'-8"	23'-4"	20'-2"
	PRI-60	28'-6"	26'-0"	24'-7"	22'-10"
	PRI-70	29'-0"	26'-5"	24'-11"	23'-1"
	PRI-80	31'-4"	28'-6"	26'-10"	25'-0"
	PRI-90	32'-2"	29'-3"	27'-7"	25'-7"

(a) Allowable **clear** span applicable to simple-span residential floor construction with a design dead load of 10 psf and live load of 40 psf. The live load deflection is limited to $\text{span}/480$.

(b) Spans are based on a composite floor with glue-nailed sheathing meeting the requirements for APA Rated Sheathing or APA Rated STURD-I-FLOOR conforming to PRP-108, PS 1, or PS 2 with a minimum thickness of 19/32 inch (40/20 or 20 oc) for a joist spacing of 19.2 inches or less, or 23/32 inch (48/24 or 24 oc) for a joist spacing of 24 inches. Adhesive shall meet APA Specification AFG-01 or ASTM D3498. Spans shall be reduced 1 foot when the floor sheathing is nailed only.

(c) Minimum bearing length shall be 1-3/4 inches for the end bearings.

(d) Bearing stiffeners are **not** required when I-joists are used with the spans and spacings given in this table, except as required for hangers.

(e) This span chart is based on uniform loads. For applications with other than uniformly distributed loads, an engineering analysis may be required based on the use of the design properties in Table 7.

Residential Floor Allowable Spans

The specific PRI designation needed for your application is easily determined by selecting the span needed and then choosing the PRI that meets your span, spacing and uniform loading criteria.

Tables 1 and 2 are for simple or multiple span applications, respectively. The use of these tables will provide maximum spans for the indicated spacings and span conditions.

To illustrate the selection of an APA PRI product, assume a design simple span of 16 feet 9 inches. For architectural reasons limit the joist depth to 11-7/8 inches and joist spacing to 19.2 inches on center. From the 9-1/2- and 11-7/8-inch entries in Table 1, look down the 19.2-inch on center spacing column. For depths of 9-1/2 inches, select **9-1/2" PRI-50** or **9-1/2" PRI-60**, and for the 11-7/8-inch depths, notice that **any** joist series will work.

While any of the PRIs shown in Tables 1 and 2 may be available in a specific market area, availability of any PRI product should be verified prior to final product selection.

The allowable spans in the tables in this design guide indicate the allowable **clear span** for various joist spacings under typical residential uniform floor loads (40 psf live load and 10 psf dead load) for glue-nailed systems.

The spans shown in Tables 1 and 2 are based on a specified joist spacing up to 24 inches or less. In addition, floor sheathing must be field glued and nailed to the I-joist flanges to achieve the PRI allowable spans. Use of these span tables is limited to uniform load conditions and PRI floor spans shall not exceed these allowable spans. APA PRIs can be used for other applications, such as roofs, to support line loads or concentrated loads, among other load types, when properly engineered using the appropriate design properties in Table 7.

TABLE 2

ALLOWABLE SPANS FOR APA EWS PERFORMANCE RATED I-JOISTS – Multiple Span Only^{(a)(b)(c)(d)(e)}

Depth	Joist Designation	Multiple Spans On Center Spacing			
		12"	16"	19.2"	24"
9-1/2"	PRI-20	18'-1"	16'-6"	15'-7"	13'-5"
	PRI-30	18'-7"	17'-0"	16'-1"	15'-0"
	PRI-40	19'-7"	17'-11"	16'-4"	14'-7"
	PRI-50	19'-5"	17'-9"	16'-9"	15'-7"
	PRI-60	20'-8"	18'-10"	17'-9"	16'-6"
	PRI-70	21'-8"	19'-7"	18'-9"	17'-5"
11-7/8"	PRI-20	21'-8"	19'-7"	18'-9"	17'-5"
	PRI-30	22'-4"	20'-5"	18'-10"	15'-0"
	PRI-40	23'-5"	20'-5"	18'-7"	16'-7"
	PRI-50	23'-3"	21'-2"	20'-0"	16'-1"
	PRI-60	24'-8"	22'-6"	21'-2"	19'-7"
	PRI-70	25'-1"	22'-10"	21'-7"	18'-6"
14"	PRI-80	27'-1"	24'-8"	23'-3"	21'-7"
	PRI-90	27'-11"	25'-5"	23'-11"	22'-2"
	PRI-40	25'-11"	22'-5"	20'-5"	18'-3"
	PRI-50	26'-6"	24'-2"	20'-2"	16'-1"
	PRI-60	28'-0"	25'-7"	24'-1"	19'-9"
	PRI-70	28'-5"	25'-11"	23'-2"	18'-6"
16"	PRI-80	30'-10"	28'-0"	26'-5"	23'-11"
	PRI-90	31'-8"	28'-10"	27'-1"	25'-2"
	PRI-40	27'-11"	24'-2"	22'-0"	19'-8"
	PRI-50	29'-6"	24'-3"	20'-2"	16'-1"
	PRI-60	31'-1"	28'-4"	24'-9"	19'-9"
	PRI-70	31'-7"	27'-10"	23'-2"	18'-6"
18"	PRI-80	34'-2"	31'-1"	29'-3"	23'-11"
	PRI-90	35'-1"	31'-10"	30'-0"	26'-7"

(a) Allowable **clear** span applicable to multiple-span residential floor construction with a design dead load of 10 psf and live load of 40 psf. The live load deflection is limited to span/480. The end spans shall be 40% or more of the adjacent span.

(b) Spans are based on a composite floor with glue-nailed sheathing meeting the requirements for APA Rated Sheathing or APA Rated STURD-I-FLOOR conforming to PRP-108, PS 1, or PS 2 with a minimum thickness of 19/32 inch (40/20 or 20 oc) for a joist spacing of 19.2 inches or less, or 23/32 inch (48/24 or 24 oc) for a joist spacing of 24 inches. Adhesive shall meet APA Specification AFG-01 or ASTM D3498. Spans shall be reduced 1 foot when the floor sheathing is nailed only.

(c) Minimum bearing length shall be 1-3/4 inches for the end bearings, and 3-1/2 inches for the intermediate bearings.

(d) Bearing stiffeners are **not** required when I-joists are used with the spans and spacings given in this table, except as required for hangers.

(e) This span chart is based on uniform loads. For applications with other than uniformly distributed loads, an engineering analysis may be required based on the use of the design properties in Table 7.

FIRE-RATED DESIGN CONSIDERATIONS

To slow or prevent the spread of fire, building codes require fire-resistant or fire-rated assemblies in certain locations, occupancies and types of buildings. There are numerous fire-rated floor-ceiling assemblies that incorporate I-joists and wood structural panels. These one-hour floor-ceiling and roof-ceiling assemblies are listed in the U.L. Fire Resistance Directory and are recognized as rated constructions by building codes. Most include a layer of 5/8-inch or 1/2-inch gypsum wallboard as a fire-resistive component. These designs are illustrated in the *APA Design Guide: Fire-Rated Systems*, Form W305.

A Rim Board® can also serve as a fire barrier when it is installed in a continuous assembly on top of a wall, parallel or perpendicular to the joists. Fire-resistant Rim Board assemblies are shown in the *APA Data File: APA Rim Board in Fire-Rated Assemblies*, Form D350.

In some designs, sprinkler systems are used with APA Performance Rated I-Joists. There are a variety of sprinkler attachments that incorporate fasteners permitted by the National Fire Protection Association (NFPA), design load assumptions published by the NFPA, and published design fastener capacities. These sprinkler attachments are illustrated in the *APA Technical Note: Sprinkler Installation for APA Performance Rated I-Joists*, Form H730.

TYPICAL FLOOR FRAMING AND CONSTRUCTION DETAILS

(See *I-Joist Construction Details*, Form D710 for roof framing and construction details)

Installation Notes:



1. Installation of APA PRIs shall be as shown in Figure 1.
2. Except for cutting to length, I-joist flanges should **never** be cut, drilled or notched.
3. Install I-joists so that top and bottom flanges are within 1/2 inch of true vertical alignment.
4. Concentrated loads should only be applied to the top surface of the top flange. Concentrated loads should not be suspended from the bottom flange with the exception of light loads, such as ceiling fans or light fixtures.
5. I-joists must be protected from the weather prior to installation.
6. I-joists must not be used in applications where they will be permanently exposed to weather, or will reach a moisture content of 16 percent or greater, such as in swimming pool or hot tub areas. They must not be installed where they will remain in direct contact with concrete or masonry.
7. End bearing length must be at least 1-3/4 inches. For multiple span joists, intermediate bearing length must be at least 3-1/2 inches.
8. Ends of floor joists shall be restrained to prevent rollover. Use APA Performance Rated™ Rim Board® or I-joist blocking panels.
9. I-joists installed beneath bearing walls perpendicular to the joists shall have full-depth blocking panels, APA Performance Rated Rim Board, or squash blocks (cripple blocks) to transfer gravity loads from above the floor system to the wall or foundation below.
10. For I-joists installed directly beneath bearing walls parallel to the joists or used as rim board or blocking panels, the maximum allowable vertical load using a single I-joist is 2,000 plf, and 4,000 plf if double I-joists are used.
11. Continuous lateral support of the I-joist's compression flange is required to prevent rotation and buckling. In simple span uses, lateral support of the top flange is normally supplied by the floor sheathing. In multiple-span or cantilever applications, bracing of the I-joist's bottom flange is also required at interior supports of multiple-span joists, and at the end support next to the cantilever extension. The ends of all cantilever extensions must be laterally braced, as shown in Figure 3, 4, 5a or 5b.
12. Nails installed perpendicular to the wide face of the flange shall be spaced in accordance with the applicable building code requirements or approved building plans, but should not be closer than 3 inches o.c. for 8d common nails used with a minimum flange width of 2-5/16 inches, or 6 inches o.c. for 8d common nails with a flange width of less than 2-5/16 inches and for 10d common nails with any flange width. If more than one row of nails is used (not permitted for I-joists with composite flanges 1-1/2 inches wide), the rows must be offset at least 1/2 inch. Nails installed parallel to the wide face of the veneers in LVL flanges shall not be spaced closer than 3 inches o.c. for 8d common nails, and 6 inches o.c. for 10d common nails.
13. Figure 1 details on the following pages show only I-joist-specific fastener requirements. For other fastener requirements, see the applicable building code.
14. For proper temporary bracing of wood I-joists and placement of temporary construction loads, see *APA Technical Note: Temporary Construction Loads Over I-Joist Roofs and Floors*, Form J735, at www.apawood.org.

FIGURE 1

TYPICAL PERFORMANCE RATED I-JOIST FLOOR FRAMING AND CONSTRUCTION

Click
on circled
numbers for
enlarged view
of detail.


Some framing requirements such as erection bracing and blocking panels have been omitted for clarity.

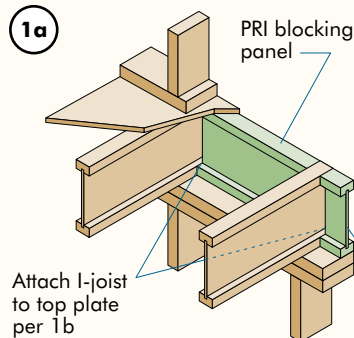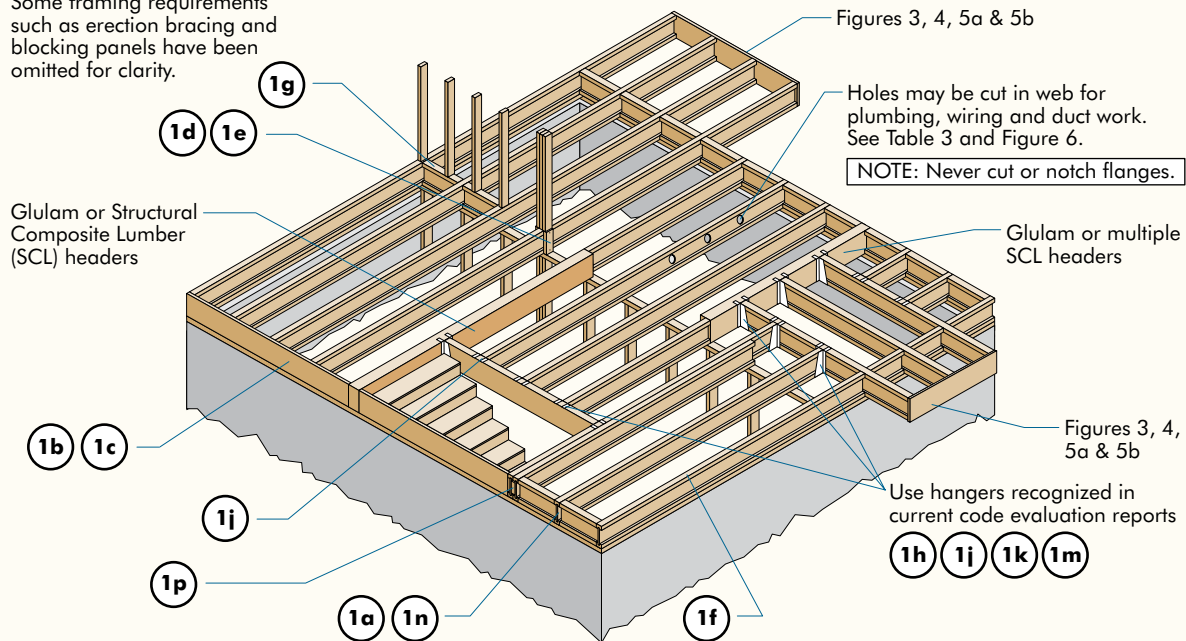

Blocking Panel or Rim Joist	Uniform Vertical Load Transfer Capacity* (plf)
PRI Joists	2000

*The uniform vertical load capacity is limited to a joist depth of 16 inches or less and shall not be increased for any load duration shorter than the normal (10-yr) load duration. It shall not be used in the design of a bending member, such as joist, header, or rafter. For concentrated vertical load transfer capacity, see 1d.

8d nails @ 6" o.c. to top plate (when used for lateral shear transfer, nail to bearing plate with same nailing as required for decking)

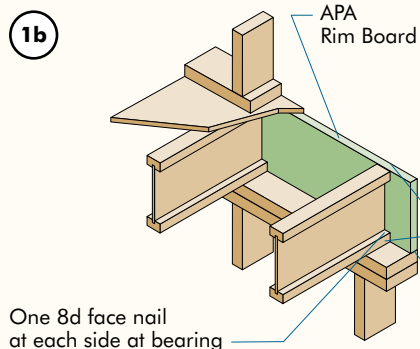

Blocking Panel or Rim Joist	Uniform Vertical Load Transfer Capacity* (plf)
1-1/8" APA Rim Board Plus	4850
1-1/8" APA Rim Board	4400
1" APA Rim Board	3300



*The uniform vertical load capacity is limited to a Rim Board depth of 16 inches or less and shall not be increased for any load duration shorter than the normal (10-yr) load duration. It shall not be used in the design of a bending member, such as joist, header, or rafter. For concentrated vertical load transfer capacity, see 1d.

One 8d common or box nail at top and bottom flange

Attach APA Rim Board to top plate using 8d common or box toenails @ 6" o.c.



Note: To avoid splitting flange, start nails at least 1-1/2" from end of I-joist. Nails may be driven at an angle to avoid splitting of bearing plate.

All nails shown in the details above are assumed to be common nails unless otherwise noted. 10d box nails (0.128 x 3 in.) may be substituted for 8d common (0.131 x 2-1/2 in.) shown in details. Individual components not shown to scale for clarity.

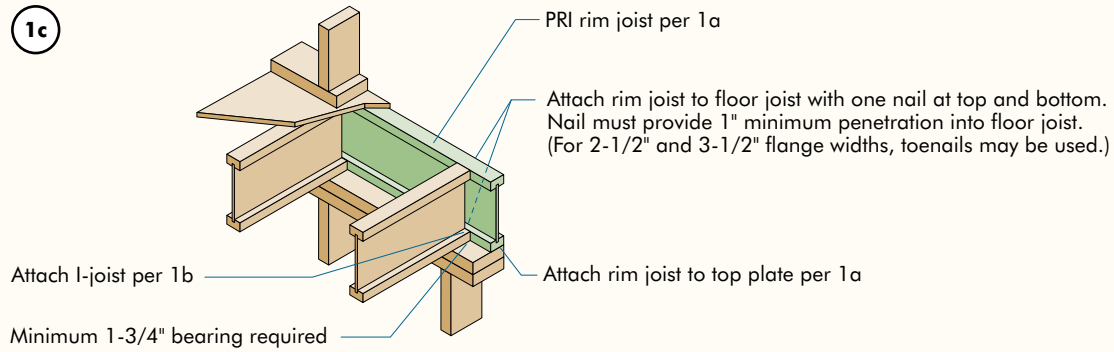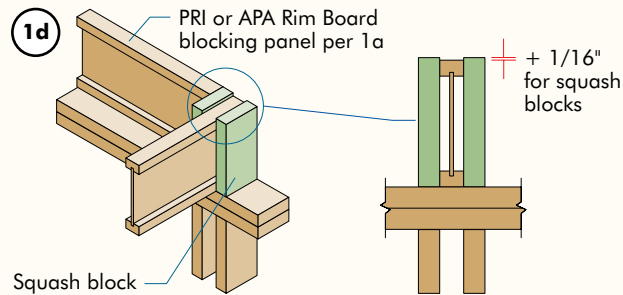1c**1d**

Pair of Squash Blocks	Vertical load transfer capacity per pair of squash blocks (lb)	
	3-1/2" wide	5-1/2" wide
2x lumber	4000	7000
1-1/8" APA Rim Board, Rim Board Plus, or Rated Sturd-I-Floor 48 oc	3000	3500
1" APA Rim Board or Rated Sturd-I-Floor 32 oc	2700	3500


Provide lateral bracing per 1a, 1b, or 1c

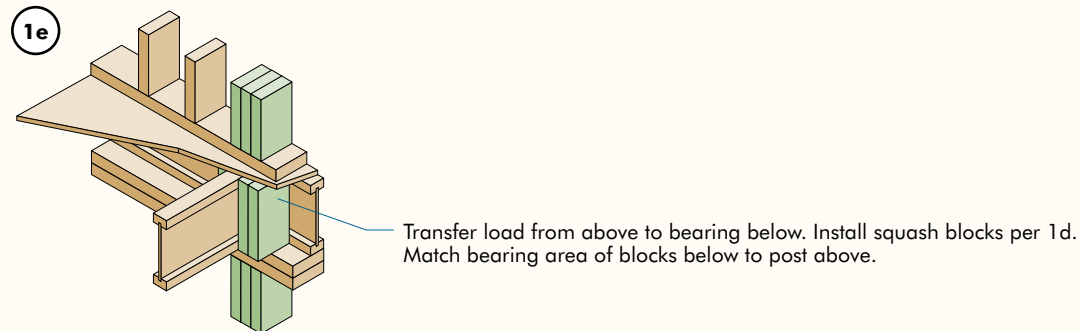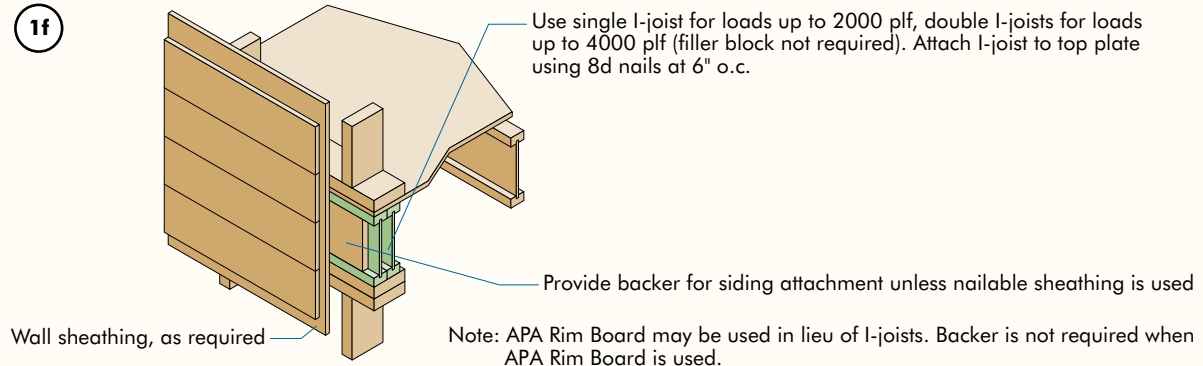1e**1f**

All nails shown in the details above are assumed to be common nails unless otherwise noted. 10d box nails (0.128 x 3 in.) may be substituted for 8d common (0.131 x 2-1/2 in.) shown in details. Individual components not shown to scale for clarity.

1g

Joist attachment per detail 1b

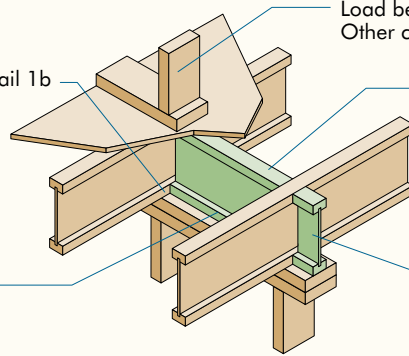8d nails at 6" o.c.
to top plate

Load bearing wall above shall align vertically with the wall below. Other conditions, such as offset walls, are not covered by this detail.

Blocking required over all interior supports under load-bearing walls or when floor joists are not continuous over support. In high seismic areas (SDC D_s, D₁, and D₂) the IRC requires blocking at all intermediate supports. The IBC requires blocking at all supports for all Seismic Design Categories.

PRI blocking panel per 1a

1h

Backer block (use if hanger load exceeds 250 lbs.)

Before installing a backer block to a double I-joist, drive 3 additional 10d nails through the webs and filler block where the backer block will fit. Clinch. Install backer tight to top flange. Use twelve 10d nails, clinched when possible. Maximum capacity for hanger for this detail = 1280 lbs.

BACKER BLOCKS (Blocks must be long enough to permit required nailing without splitting)

Flange Width	Material Thickness Required*	Minimum Depth**
1-1/2"	19/32"	5-1/2"
1-3/4"	23/32"	5-1/2"
2-5/16"	1"	7-1/4"
2-1/2"	1"	5-1/2"
3-1/2"	1-1/2"	7-1/4"

* Minimum grade for backer block material shall be Utility grade SPF (south) or better for solid sawn lumber and Rated Sheathing grade for wood structural panels.

** For face-mount hangers use net joist depth minus 3-1/4" for joists with 1-1/2" thick flanges. For 1-5/16" thick flanges use net depth minus 2-7/8".

Top- or
face-mounted
hanger

Double I-joist header

Note: Unless hanger sides laterally support the top flange, bearing stiffeners shall be used.


Filler block
per Figure 1pBacker block required
(both sides for face-mounted hangers)

For hanger capacity see hanger manufacturer's recommendations. Verify double I-joist capacity to support concentrated loads.

1j

Glulam or multiple structural composite lumber (SCL) beams

For nailing schedules for multiple SCL beams, see the manufacturer's recommendations

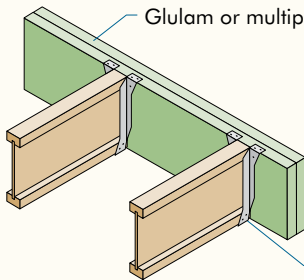

Top- or face-mounted hanger installed per manufacturer's recommendations


Note: Unless hanger sides laterally support the top flange, bearing stiffeners shall be used.

All nails shown in the details above are assumed to be common nails unless otherwise noted. 10d box nails (0.128 x 3 in.) may be substituted for 8d common (0.131 x 2-1/2 in.) shown in details. Individual components not shown to scale for clarity.

1k

2x plate flush with inside face of wall or beam

Note: Unless hanger sides laterally support the top flange, bearing stiffeners shall be used.

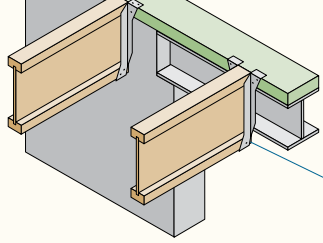


Top-mounted hanger installed per manufacturer's recommendations

1m

Multiple I-joist header with full depth filler block shown. Glulam and multiple SCL headers may also be used. Verify double I-joist capacity to support concentrated loads.

Backer block attach per 1h. Nail with twelve 10d nails, clinch when possible.

Install hanger per manufacturer's recommendations

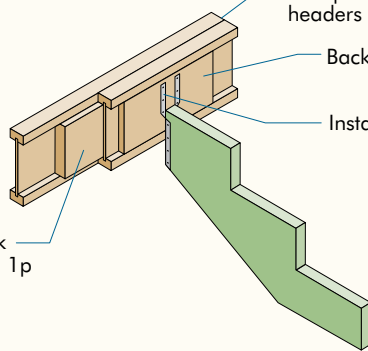
Filler block
per Figure 1p

Maximum support capacity = 1280 lbs.

1n

Do not bevel-cut joist beyond inside face of wall

Attach I-joist per 1b

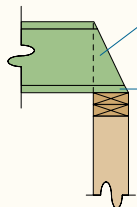


Note: Blocking required at bearing for lateral support, not shown for clarity.

All nails shown in the details above are assumed to be common nails unless otherwise noted. Individual components not shown to scale for clarity.

1p

FILLER BLOCK REQUIREMENTS FOR DOUBLE I-JOIST CONSTRUCTION

Flange Width	Net Depth	Filler Block Size
1-1/2"	9-1/2" 11-7/8"	1-1/8" x 6" high 1-1/8" x 8" high
1-3/4"	9-1/2" 11-7/8" 14" 16"	1-3/8" x 6" 1-3/8" x 8" 1-3/8" x 10" 1-3/8" x 12"
2-5/16"	11-7/8" 14" 16"	2" x 8" 2" x 10" 2" x 12"
2-1/2"	9-1/2" 11-7/8" 14" 16"	2-1/8" x 6" 2-1/8" x 8" 2-1/8" x 10" 2-1/8" x 12"
3-1/2"	11-7/8" 14" 16"	3" x 8" 3" x 10" 3" x 12"

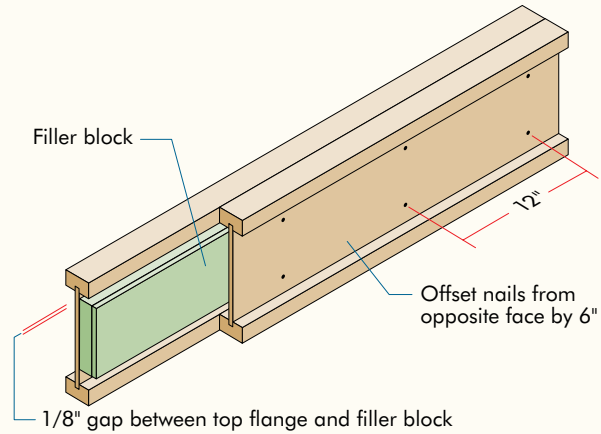**Notes:**

1. Support back of I-joist web during nailing to prevent damage to web/flange connection.
2. Leave a 1/8-inch gap between top of filler block and bottom of top I-joist flange.
3. Filler block is required between joists for full length of span.
4. Nail joists together with two rows of 10d nails at 12 inches o.c. (clinched when possible) on each side of the double I-joist. Total of 4 nails per foot required. If nails can be clinched, only 2 nails per foot are required.
5. The maximum load that may be applied to one side of the double joist using this detail is 620 lbf/ft.

All nails shown in the details above are assumed to be common nails unless otherwise noted. Individual components not shown to scale for clarity.

I-JOIST WEB STIFFENERS


A web stiffener is a wood block that is used to reinforce the web of an I-joist at locations where:

- The webs of the I-joist are in jeopardy of buckling out of plane. This usually occurs in deeper I-joists.
- The webs of the I-joist are in jeopardy of “knifing” through the I-joist flanges. This can occur at any I-joist depth when the design reaction loads exceed a specific level.
- The I-joist is supported in a hanger and the sides of the hanger do not extend up to the top flange. With the top flange unsupported by the hanger sides, the joist may deflect laterally, putting a twist in the flange of the joist. The web stiffener supports the I-joist along a vertical axis as designed. (In this application, the web stiffener acts very much like a backer block.)

There are two kinds of web stiffeners: **bearing stiffeners** and **load stiffeners**. They are differentiated by the applied load and the location of the gap between the slightly undersized stiffener and the top or bottom flange. (See Figure 2.)

FIGURE 2

WEB STIFFENER INSTALLATION DETAILS

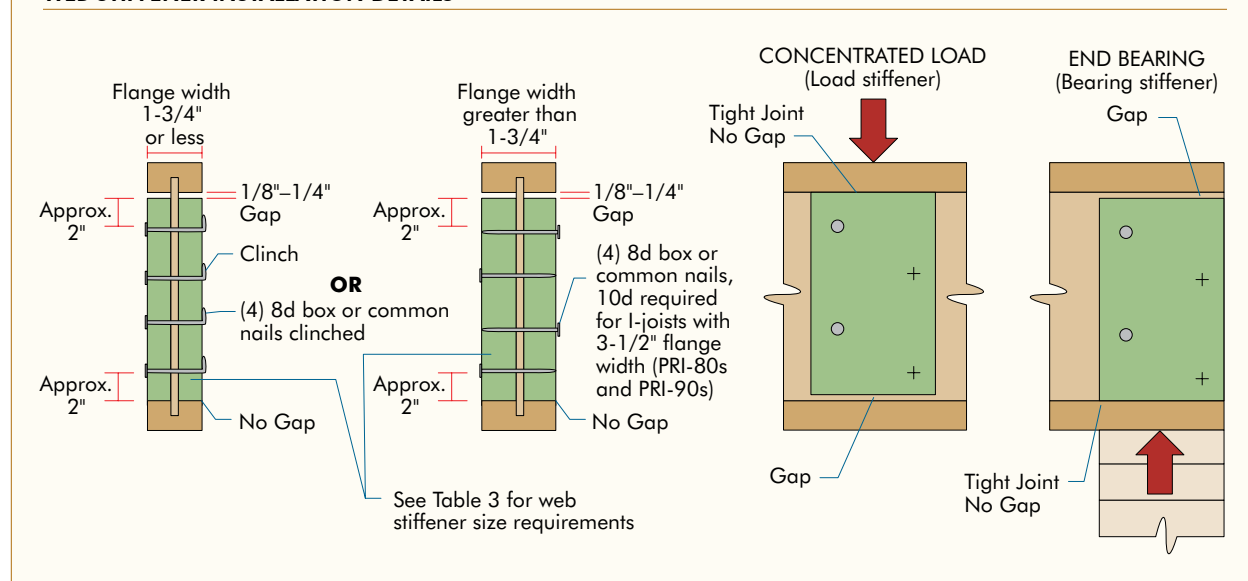

Bearing stiffeners are located at the reactions, both interior and exterior, when required.

Load stiffeners are located between supports where significant point loads are applied to the top flange of an I-joist.

Physical description:

Web stiffener blocks may be comprised of lumber, APA Rim Board or wood structural panels. The minimum grade of wood structural panels is Rated Sheathing; minimum lumber grade is Utility grade SPF (south) or better.

Ideally, the depth of the web stiffener should equal the distance between the flanges of the joist minus 1/8 inch to 1/4 inch. For **bearing stiffeners**, this gap is placed between the top of the stiffener and the bottom of the top flange. For **load stiffeners**, the gap is located at the bottom of the stiffener.

TABLE 3

STIFFENER SIZE REQUIREMENTS

PRI Flange Width	Web Stiffener Size Each Side of Web
1-1/2"	15/32" x 2-5/16" minimum width
1-3/4"	19/32" x 2-5/16" minimum width
2-5/16"	1" x 2-5/16" minimum width
2-1/2"	1" x 2-5/16" minimum width
3-1/2"	1-1/2" x 2-5/16" minimum width

Recommendations for I-joists designed in accordance with APA Standard PRI-400:

1. A **bearing stiffener** is required in all engineered applications with design end reactions greater than 1,550 lbs, with the exception of PRI-90, which requires bearing stiffeners when end reaction values exceed 1,885 lbs. The gap between the stiffener and the flange is at the top.
2. A **bearing stiffener** is required when the I-joist is supported in a hanger and the sides of the hanger do not extend up to, and support, the top flange. The gap between the stiffener and flange is at the top.
3. A **load stiffener** is required at locations where a concentrated load greater than 1,500 lbs is applied to the top flange between supports, or in the case of a cantilever, anywhere between the cantilever tip and the support. These values are for normal duration of load, and may be adjusted for other load durations as permitted by the code. The gap between the stiffener and the flange is at the bottom.

Cantilever Details for Balconies (No Wall Load)

Balconies may be constructed using either continuous APA PRIs (Figure 3) or by adding lumber extensions (Figure 4) to the I-joist. Continuous I-joist cantilevers are limited to one-fourth the adjacent span when supporting uniform loads only. For applications supporting concentrated loads at the end of the cantilever, such as a wall, see Figures 5a, 5b and 5c.

Unless otherwise engineered, cantilevers are limited to a maximum of 4 feet when supporting uniform loads only. Blocking is required at the cantilever support, as shown.

Uniform floor load shall not exceed 40 psf live load and 10 psf dead load. The balcony load shall not exceed 60 psf live load and 10 psf dead load.

FIGURE 3

I-JOIST CANTILEVER DETAIL FOR BALCONIES


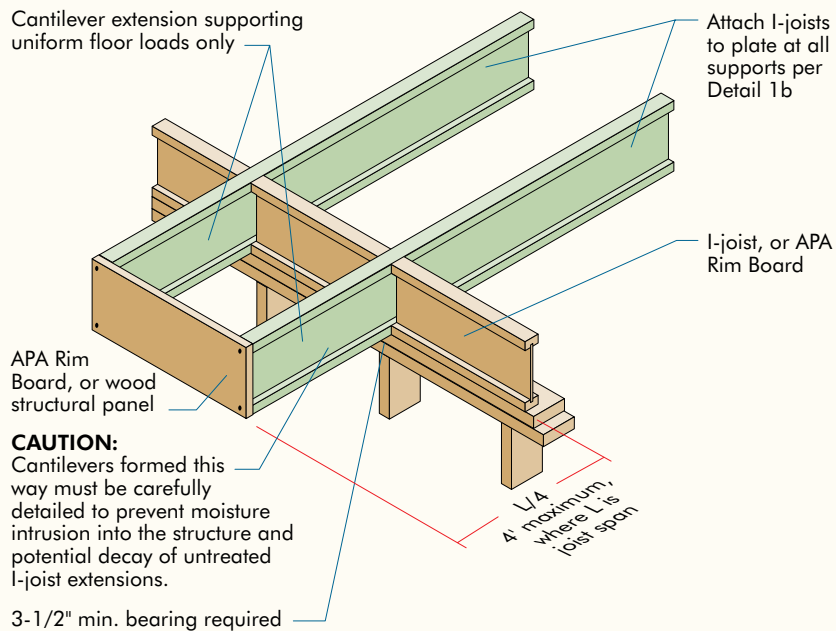


FIGURE 4

LUMBER CANTILEVER DETAIL FOR BALCONIES

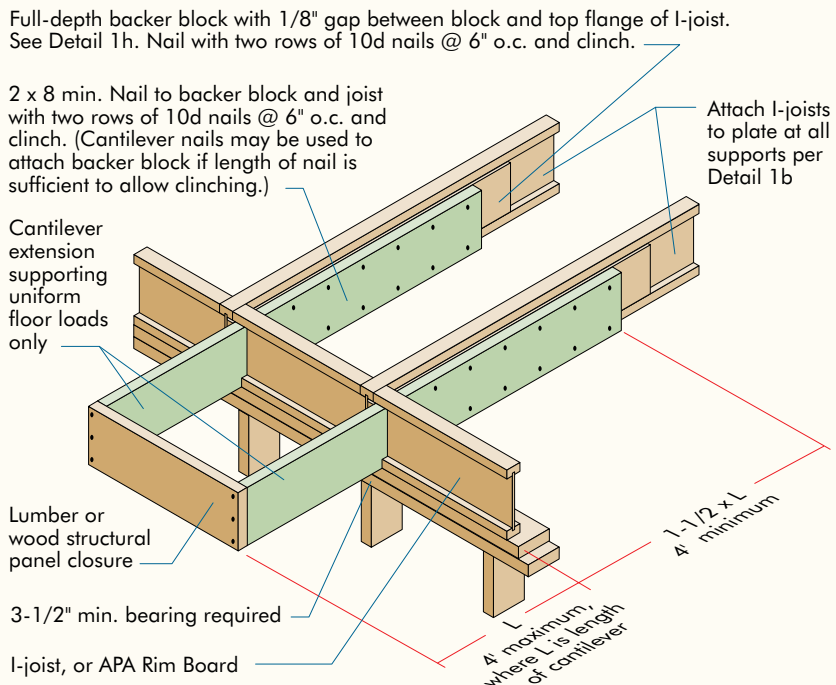

All nails shown in the details above are assumed to be common nails unless otherwise noted. Individual components not shown to scale for clarity.

Cantilever Details for Vertical Building Offset (Concentrated Wall Load)


I-joists may also be used in cantilever applications supporting a concentrated load applied to the end of the cantilever, such as with a vertical building offset. For cantilever-end concentrated load applications that require reinforcing based on Table 4, the cantilever is limited to 2 feet maximum. In addition, blocking is required along the cantilever support and for 4 feet on each side of the cantilever area. Subject to the roof loads and layout (see Table 4), three methods of reinforcing are allowed in load bearing cantilever applications: reinforcing sheathing applied to one side of the I-joist (Method 1), reinforcing sheathing applied to both sides of the I-joist (Method 2) **or** double I-joists (Alternate Method 2).

FIGURE 5a

CANTILEVER DETAIL FOR VERTICAL BUILDING OFFSET


Method 1 SHEATHING REINFORCEMENT ONE SIDE

APA Rim Board or wood structural panel closure (minimum 23/32 Performance Category), attach per Detail 1b

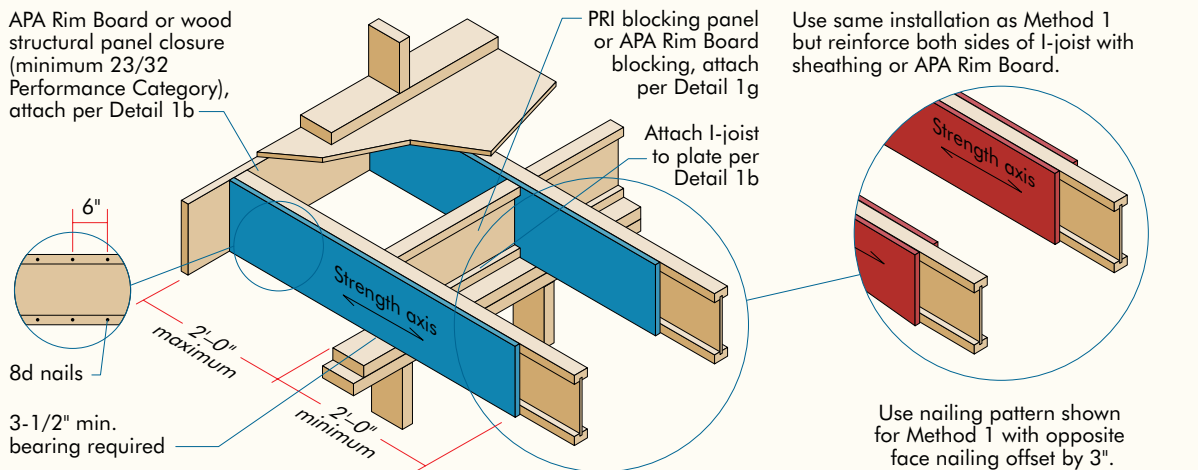

Method 2 SHEATHING REINFORCEMENT TWO SIDES

Use same installation as Method 1 but reinforce both sides of I-joist with sheathing or APA Rim Board.

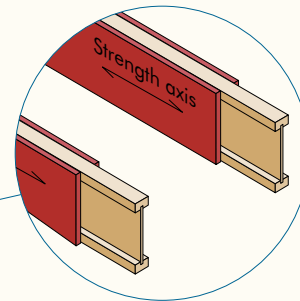


Use nailing pattern shown for Method 1 with opposite face nailing offset by 3".

Note: APA RATED SHEATHING 48/24 or APA RATED STURD-I-FLOOR 24 oc (minimum 23/32 Performance Category) required on sides of joist. Depth shall match the full height of the joist. Nail with 8d nails at 6" o.c., top and bottom flange. Install with face grain horizontal. Attach I-joist to plate at all supports per Detail 1b.


All nails shown in the details above are assumed to be common nails unless otherwise noted. Individual components not shown to scale for clarity.

FIGURE 5b

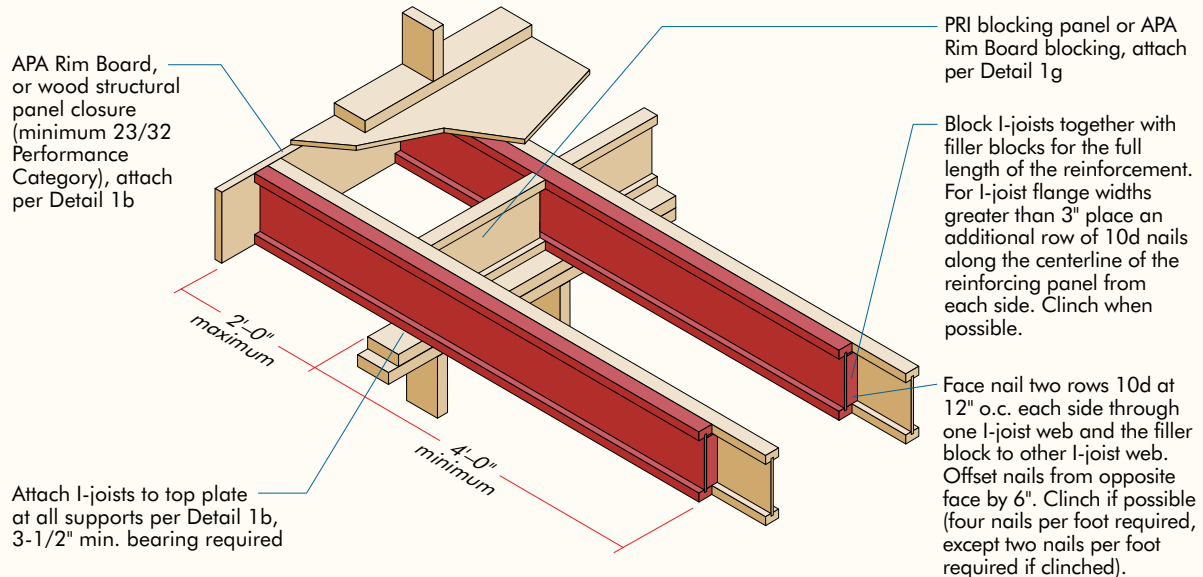
CANTILEVER DETAIL FOR VERTICAL BUILDING OFFSET**Alternate Method 2**
DOUBLE I-JOIST

All nails shown in the details above are assumed to be common nails unless otherwise noted. Individual components not shown to scale for clarity.

FIGURE 5c

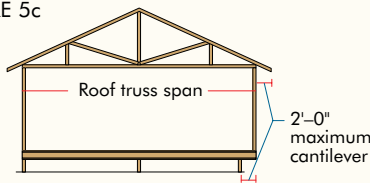

See Table below for APA PRI reinforcement requirements at cantilever.

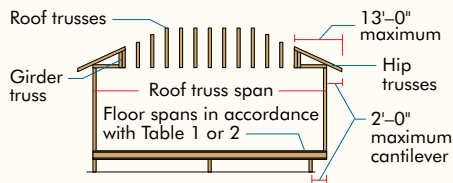

For hip roofs with the hip trusses running parallel to the cantilevered floor joists, the I-joist reinforcement requirements for a span of 26 ft shall be permitted to be used.

TABLE 4

PRI CANTILEVER REINFORCEMENT METHODS ALLOWED

Joist Depth (in.)	Roof Truss Span (ft)	ROOF LOADINGS											
		TL = 35 psf LL not to exceed 20 psf				TL = 45 psf LL not to exceed 30 psf				TL = 55 psf LL not to exceed 40 psf			
		Joist Spacing (in.)				Joist Spacing (in.)				Joist Spacing (in.)			
		12	16	19.2	24	12	16	19.2	24	12	16	19.2	24
9-1/2	26	N	N	N	1,2	N	N	1,2	2	N	1,2	2	X
	28	N	N	1,2	1,2	N	N	1,2	2	N	1,2	2	X
	30	N	N	2	1,2	N	1,2	1,2	2	N	1,2	2	X
	32	N	N	1,2	2	N	1,2	1,2	X	N	1,2	2	X
	34	N	N	1,2	2	N	1,2	2	X	N	2	X	X
	36	N	N	1,2	2	N	1,2	2	X	N	2	X	X
11-7/8	26	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
	28	N	N	1,2	1,2	N	1,2	1,2	1,2	N	1,2	1,2	2
	30	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	1,2	2
	32	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	1,2	2
	34	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	2
	36	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	2
14	38	N	1,2	1,2	2	N	1,2	1,2	2	1,2	1,2	2	X
	26	N	N	N	1,2	N	N	N	1,2	N	N	1,2	1,2
	28	N	N	N	1,2	N	N	1,2	1,2	N	N	1,2	2
	30	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
	32	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
	34	N	N	N	1,2	N	N	1,2	2	N	1,2	1,2	2
16	36	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	1,2	2
	38	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	1,2	2
	40	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	2
	26	N	N	N	1,2	N	N	1,2	1,2	N	N	1,2	1,2
	28	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
	30	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
16	32	N	N	N	1,2	N	N	1,2	1,2	N	1,2	1,2	2
	34	N	N	1,2	1,2	N	N	1,2	2	N	1,2	1,2	2
	36	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	1,2	2
	38	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	2
	40	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	2
	42	N	N	1,2	1,2	N	1,2	1,2	2	N	1,2	2	X

Notes:

- (1) N = No reinforcement required.
- 1 = PRIs reinforced with 23/32 Performance Category wood structural panel on one side only.
- 2 = PRIs reinforced with 23/32 Performance Category wood structural panel on both sides or double I-joist.
- X = Try a deeper joist or closer spacing.
- (2) Color coding in table is matched to details in Figure 5a and 5b.
- (3) Maximum load shall be: 15 psf roof dead load, 50 psf floor total load, and 80 plf wall load. Wall load is based on 3'-0" maximum width window

or door openings. For larger openings, or multiple 3'-0" width openings spaced less than 6'-0" o.c., additional joists beneath the opening's cripple studs may be required.

- (4) Table applies to joists 12" to 24" o.c. Use 12" o.c. requirements for lesser spacings.
- (5) For conventional roof construction using a ridge beam, the Roof Truss Span column above is equivalent to the distance between the supporting wall and the ridge beam. When the roof is framed using a ridge board, the Roof Truss Span is equivalent to the distance between the supporting walls as if a truss is used.


WEB HOLE SPECIFICATIONS

One of the benefits of using I-joists in residential floor construction is that holes may be cut in the joist webs to accommodate electrical wiring, plumbing lines and other mechanical systems, therefore minimizing the depth of the floor system.

Rules for cutting holes in PRI Joists

1. The distance between the inside edge of the support and the centerline of any hole shall be in compliance with the requirements of Table 5.
2. I-joist top and bottom flanges must NEVER be cut, notched or otherwise modified.
3. Whenever possible, field-cut holes should be centered on the middle of the web.
4. The maximum size hole that can be cut into an I-joist web shall equal the clear distance between the flanges of the I-joist minus 1/4 inch. A minimum of 1/8 inch should always be maintained between the top or bottom of the hole and the adjacent I-joist flange.
5. The sides of square holes or longest sides of rectangular holes should not exceed three-fourths of the diameter of the maximum round hole permitted at that location.
6. Where more than one hole is necessary, the distance between adjacent hole edges shall exceed twice the diameter of the largest round hole or twice the size of the largest square hole (*or twice the length of the longest side of the longest rectangular hole*) and each hole must be sized and located in compliance with the requirements of Table 5.
7. A knockout is **not** considered a hole, may be utilized anywhere it occurs and may be ignored for purposes of calculating minimum distances between holes.
8. Holes measuring 1-1/2 inches or smaller shall be permitted anywhere in a cantilevered section of a PRI Joist. Holes of greater size may be permitted subject to verification.
9. A 1-1/2-inch hole or smaller can be placed anywhere in the web provided that it meets the requirements of rule number 6 above.
10. All holes shall be cut in a workman-like manner in accordance with the restrictions listed above and as illustrated in Figure 6.
11. Limit three maximum-size holes per span.
12. A group of round holes at approximately the same location shall be permitted if they meet the requirements for a single round hole circumscribed around them.

FIGURE 6

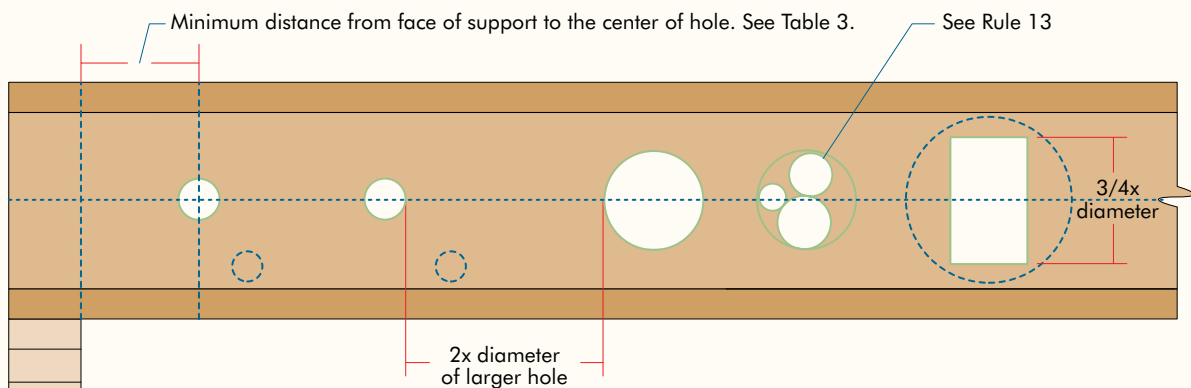PRI JOIST TYPICAL HOLES

Knockouts are prescored holes often provided by I-joist manufacturers for the contractor's convenience to install electrical or small plumbing lines. They are typically 1-3/8 to 1-3/4 inches in diameter, and are spaced 12 to 24 inches on center along the length of the I-joist. Where possible, it is preferable to use knockouts instead of field-cutting holes.

Cutting the Hole

- Never drill, cut or notch the flange, or over-cut the web.
- Holes in webs should be cut with a sharp saw.
- For rectangular holes, avoid over-cutting the corners, as this can cause unnecessary stress concentrations. Slightly rounding the corners is recommended. Starting the rectangular hole by drilling a 1-inch-diameter hole in each of the four corners and then making the cuts between the holes is another good method to minimize damage to the I-joist.

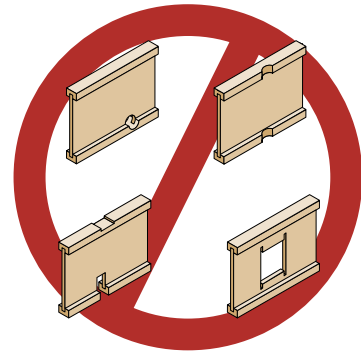


TABLE 5

LOCATION OF CIRCULAR HOLES IN PRI JOIST WEBS**Simple or Multiple Span for Dead Loads up to 10 psf and Live Loads up to 40 psf^{(a)(b)(c)(d)}**

		Minimum Distance from Inside Face of Any Support to Center of Hole (ft.-in.)															
Joist Depth	Joist	SAF ^(e)	Round Hole Diameter (in.)														
			2	3	4	5	6	6-1/4	7	8	8-5/8	9	10	10-3/4	11	12	12-3/4
9-1/2"	PRI-20	13'-5"	0'-7"	0'-11"	2'-2"	3'-6"	5'-3"	5'-8"									
	PRI-30	13'-10"	0'-9"	2'-0"	3'-3"	4'-7"	6'-1"	6'-6"									
	PRI-40	14'-6"	0'-7"	1'-8"	3'-0"	4'-4"	5'-9"	6'-3"									
	PRI-50	14'-5"	1'-1"	2'-4"	3'-8"	5'-0"	6'-6"	6'-11"									
	PRI-60	15'-3"	1'-8"	3'-0"	4'-4"	5'-8"	7'-3"	7'-8"									
11-7/8"	PRI-20	13'-5"	0'-7"	0'-8"	0'-8"	0'-9"	1'-11"	2'-5"	3'-10"	5'-11"	7'-4"						
	PRI-30	15'-0"	0'-7"	0'-8"	0'-8"	1'-9"	3'-4"	3'-9"	5'-0"	6'-10"	8'-0"						
	PRI-40	16'-7"	0'-7"	0'-8"	1'-2"	2'-5"	3'-9"	4'-1"	5'-1"	6'-8"	7'-11"						
	PRI-50	16'-1"	0'-7"	0'-8"	0'-11"	2'-6"	4'-1"	4'-6"	5'-10"	7'-8"	8'-11"						
	PRI-60	18'-2"	0'-8"	1'-10"	3'-2"	4'-5"	5'-10"	6'-2"	7'-4"	8'-11"	10'-0"						
	PRI-70	18'-6"	0'-7"	1'-2"	2'-5"	3'-9"	5'-2"	5'-8"	7'-0"	8'-10"	10'-2"						
	PRI-80	19'-10"	1'-11"	3'-2"	4'-6"	5'-10"	7'-3"	7'-8"	8'-10"	10'-6"	11'-7"						
	PRI-90	20'-5"	0'-7"	0'-8"	1'-4"	3'-0"	4'-9"	5'-3"	6'-8"	8'-8"	10'-0"						
14"	PRI-40	18'-3"	0'-7"	0'-8"	0'-8	0'-9"	1'-10"	2'-2"	3'-2"	4'-7"	5'-5"	6'-0"	7'-7"	9'-4"			
	PRI-50	16'-1"	0'-7"	0'-8"	0'-8"	0'-9"	0'-9"	1'-1"	2'-6"	4'-6"	5'-9"	6'-7"	8'-10"	10'-7"			
	PRI-60	19'-9"	0'-7"	0'-8"	0'-8"	1'-7"	3'-2"	3'-6"	4'-9"	6'-6"	7'-8"	8'-4"	10'-4"	11'-11"			
	PRI-70	18'-6"	0'-7"	0'-8"	0'-8"	0'-11"	2'-6"	2'-11"	4'-2"	5'-11"	7'-0"	7'-10"	10'-1"	12'-0"			
	PRI-80	22'-7"	0'-7"	1'-9"	3'-0"	4'-4"	5'-8"	6'-1"	7'-1"	8'-7"	9'-7"	10'-3"	12'-2"	13'-10"			
	PRI-90	23'-2"	0'-7"	0'-8"	0'-9"	2'-4"	3'-11"	4'-4"	5'-7"	7'-4"	8'-6"	9'-3"	11'-3"	12'-10"			
16"	PRI-40	19'-8"	0'-7"	0'-8"	0'-8"	0'-9"	0'-9"	0'-10"	1'-5"	2'-9"	3'-7"	4'-1"	5'-6"	6'-7"	7'-0"	8'-9"	10'-9"
	PRI-50	16'-1"	0'-7"	0'-8"	0'-8"	0'-9"	0'-9"	0'-10"	0'-10"	0'-10"	1'-9"	2'-6"	4'-6"	6'-0"	6'-8"	9'-7"	11'-11"
	PRI-60	19'-9"	0'-7"	0'-8"	0'-8"	0'-9"	0'-9"	0'-10"	1'-10"	3'-6"	4'-6"	5'-2"	7'-3"	8'-11"	9'-6"	11'-10"	13'-9"
	PRI-70	18'-6"	0'-7"	0'-8"	0'-8"	0'-9"	0'-9"	0'-10"	1'-0"	2'-11"	4'-1"	4'-10"	6'-11"	8'-7"	9'-1"	11'-6"	13'-6"
	PRI-80	23'-11"	0'-7"	0'-8"	0'-8"	1'-7"	3'-2"	3'-7"	4'-10"	6'-6"	7'-7"	8'-3"	10'-2"	11'-8"	12'-2"	14'-3"	16'-0"
	PRI-90	25'-7"	0'-7"	0'-8"	0'-8"	0'-10"	2'-3"	2'-8"	3'-10"	5'-5"	6'-5"	7'-1"	8'-10"	10'-4"	10'-10"	13'-3"	15'-3"

Notes:

(a) Above tables may be used for I-joist spacing of 24 inches o.c. or less.

(b) Hole location distance is measured from inside face of supports to center of hole.

(c) Distances in this chart are based on uniformly loaded joists.

(d) Hole sizes and/or locations that fall outside the scope of this table may be acceptable based on analysis of actual hole size, span, spacing and loading conditions. The I-joist shear capacity at the location of a circular web hole (V_{rh}) is calculated using the following equation:

$$V_{rh} = \text{Published Shear Value} \times [(\text{Joist Depth} - \text{Hole Diameter}) / \text{Joist Depth}].$$

(e) SAF = Span Adjustment Factor, used as defined below:

OPTIONAL:

Table 5 is based on the I-joists used at their maximum span. If the I-joists are placed at less than their full allowable span, the maximum distance from the centerline of the hole to the face of any support (D) as given above may be reduced as follows:

$$D_{\text{reduced}} = \frac{L_{\text{actual}}}{\text{SAF}} \times D$$

Where: D_{reduced} = Distance from the inside face of any support to center of hole, reduced for less-than-maximum span applications (ft). The reduced distance shall not be less than 6 inches from the face of the support to edge of the hole. L_{actual} = The actual measured span distance between the inside faces of supports (ft).

SAF = Span Adjustment Factor given in this table.

D = The minimum distance from the inside face of any support to center of hole from this table.

If $\frac{L_{\text{actual}}}{\text{SAF}}$ is greater than 1, use 1 in the above calculation for $\frac{L_{\text{actual}}}{\text{SAF}}$.

RIM BOARD HOLE SPECIFICATIONS

The maximum allowable hole size for an APA Rim Board shall be $\frac{2}{3}$ of the Rim Board depth, as shown below. The length of the Rim Board segment containing a hole shall be at least eight times the hole size.

TABLE 6

RIM BOARD HOLE SIZES AND MINIMUM LENGTH

Rim Board Depth (in.)	Maximum Allowable Hole Size ^{(a)(b)} (in.)	Minimum Length of Rim Board Segment ^(c) for the Maximum Allowable Hole Size (in.)
9-1/2	6-1/4	50
11-7/8	7-3/4	62
14	9-1/4	74
16	10-1/2	84

(a) These hole provisions do not apply to Rim Board installed over openings, such as doors or windows.

(b) The diameter of a round hole or the longer dimension of a rectangular hole.

(c) The length of Rim Board segment per wall line. For multiple holes, the minimum length of Rim Board segment shall be eight times the sum of all hole sizes.


Application Notes

1. Do not cut holes in Rim Board installed over openings, such as doors or windows, where the Rim Board is not fully supported, except that holes of 1-1/2 inches or less in size are permitted provided they are positioned at the mid-depth and in the middle one-third of the span (see Note 5 for minimum hole spacing).

FIGURE 7

RIM BOARD OVER AN OPENING


Do not cut holes in Rim Board over opening except for holes of 1-1/2" or less in size (see Note 1).

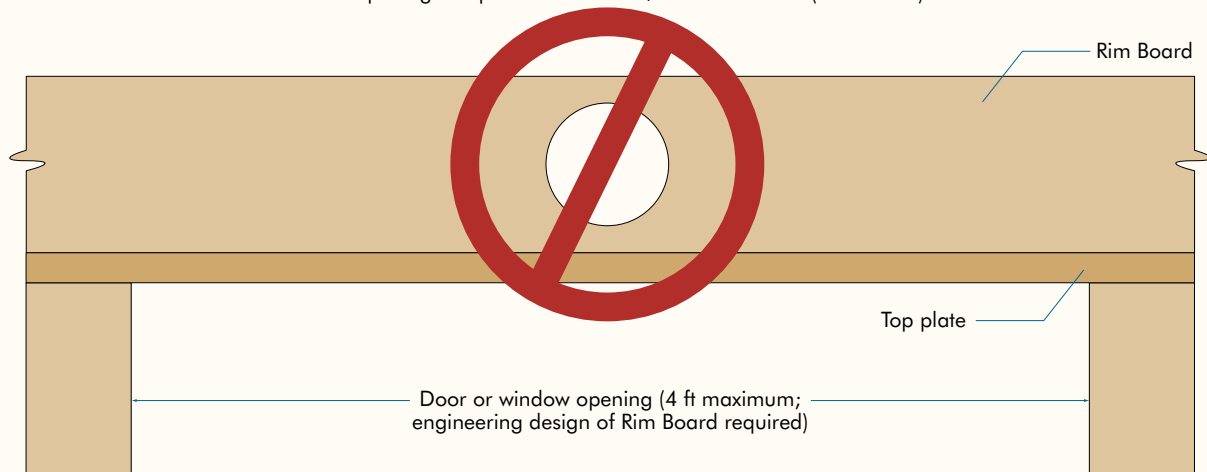

2. Field-cut holes should be vertically centered in the Rim Board and at least one hole diameter or 6 inches, whichever is less, clear distance away from the end of the wall line. Holes should never be placed such that they interfere with the attachment of the Rim Board to the ends of the floor joist, or any other code-required nailing.


3. While round holes are preferred, rectangular holes may be used providing the corners are not over-cut. Slightly rounding corners by pre-drilling with a 1-inch-diameter bit is recommended.
4. When concentrated loads are present on the Rim Board (loads not supported by any other vertical-load-carrying members such as squash blocks), holes should not be placed in the Rim Board within a distance equal to the depth of the Rim Board from the area of loading.

FIGURE 8

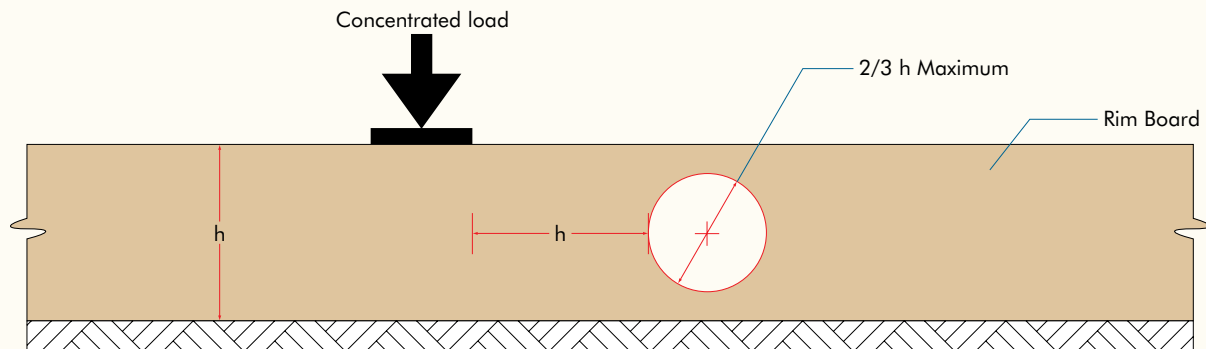RIM BOARD NEAR CONCENTRATED VERTICAL LOAD

5. For multiple holes, the clear spacing between holes shall be at least two times the diameter of the larger hole, or twice the length of the longest side of the longest rectangular hole. This minimum hole spacing does not apply to holes of 1-1/2 inches or less in diameter, which can be placed anywhere in the Rim Board (see Note 1 for holes over opening) except that the clear distance to the adjacent hole shall be 3 inches minimum.

FIGURE 9

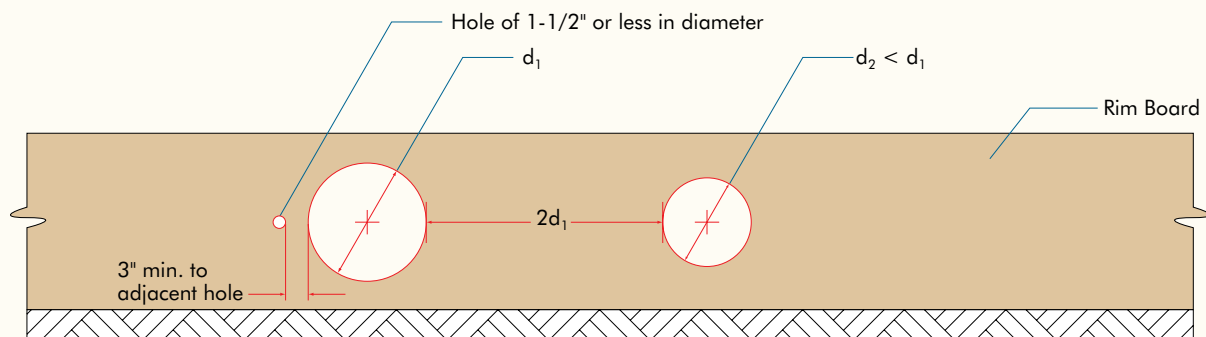MULTIPLE HOLES FOR RIM BOARD

6. All holes shall be cut in a workman-like manner in accordance with the limitations listed above.

TABLE 7

DESIGN PROPERTIES FOR APA EWS PERFORMANCE RATED I-JOISTS^(A)

Depth	Joist Designation	EI ^(b) 10 ⁶ lbf-in. ²	M ^(c) lbf-ft	V ^(d) lbf	IR ^(e) lbf	ER ^(f) lbf	K ^(g) 10 ⁶ lbf
9-1/2"	PRI-20	145	2,520	1,120	1,700	830	4.94
	PRI-30	161	3,225	1,120	1,905	945	4.94
	PRI-40	193	2,735	1,120	2,160	1,080	4.94
	PRI-50	186	3,800	1,120	2,040	1,015	4.94
	PRI-60	231	3,780	1,120	2,160	1,080	4.94
11-7/8"	PRI-20	253	3,265	1,420	1,700	830	6.18
	PRI-30	280	4,170	1,420	1,905	945	6.18
	PRI-40	330	3,545	1,420	2,500	1,200	6.18
	PRI-50	322	4,915	1,420	2,040	1,015	6.18
	PRI-60	396	4,900	1,420	2,500	1,200	6.18
	PRI-70	420	6,595	1,420	2,335	1,160	6.18
	PRI-80	547	6,940	1,420	2,760	1,280	6.18
	PRI-90	604	8,770	1,925	3,355	1,400	6.18
14"	PRI-40	482	4,270	1,710	2,500	1,200	7.28
	PRI-50	480	5,860	1,710	2,040	1,015	7.28
	PRI-60	584	5,895	1,710	2,500	1,200	7.28
	PRI-70	613	7,865	1,710	2,335	1,160	7.28
	PRI-80	802	8,360	1,710	3,020	1,280	7.28
	PRI-90	881	10,460	2,125	3,355	1,400	7.28
16"	PRI-40	657	4,950	1,970	2,500	1,200	8.32
	PRI-50	663	6,715	1,970	2,040	1,015	8.32
	PRI-60	799	6,835	1,970	2,500	1,200	8.32
	PRI-70	841	9,010	1,970	2,335	1,160	8.32
	PRI-80	1,092	9,690	1,970	3,020	1,280	8.32
	PRI-90	1,192	11,985	2,330	3,355	1,400	8.32

For SI: 1 lbf = 4.448 N, 1 lbf-ft = 1.356 N-m, 1 lbf-in.² = 0.00287 N-m², 1 inch = 25.4 mm.

(a) The tabulated values are design values for normal duration of load. All values, except for EI and K, are permitted to be adjusted for other load durations as permitted by the code for solid sawn lumber.

(b) Bending stiffness (EI) of the I-joist.

(c) Moment capacity (M) of I-joists, which shall **not** be increased by any repetitive member use factor.

(d) Shear capacity (V) of the I-joist.

(e) Intermediate reaction (IR) of the I-joist with a minimum bearing length of 3-1/2 inches without bearing stiffeners.

(f) End reaction (ER) of the I-joist with a minimum bearing length of 1-3/4 inches without web stiffeners. Higher end reactions are permitted. For a bearing length of 4 inches (5 inches for 14" and 16" PRI-50s), the end reaction may be set equal to the tabulated shear value. Interpolation of the end reaction between 1-3/4 and 4-inch (5-inch for 14" and 16" PRI-50s) bearing is permitted. For end reaction values over 1,550 lbf, web stiffeners are required with the exception of PRI-90, which requires bearing stiffeners when end reaction values exceed 1,885 lbf.

(g) Coefficient of shear deflection (K). For calculating uniform load and center-point load deflections of the I-joist in a simple-span application, use Eqs. 1 and 2.

$$\text{Uniform Load: } \delta = \frac{5\omega\ell^4}{384EI} + \frac{\omega\ell^2}{K} \quad [1]$$

$$\text{Center-Point Load: } \delta = \frac{P\ell^3}{48EI} + \frac{2P\ell}{K} \quad [2]$$

Where: δ = calculated deflection (in.)

ω = uniform load (lbf/in.)

ℓ = design span (in.)

P = concentrated load (lbf)

EI = bending stiffness of the I-joist (lbf-in.²)

K = coefficient of shear deflection (lbf)

Performance Rated I-Joists

We have field representatives in many major U.S. cities and in Canada who can help answer questions involving APA trademarked products. For additional assistance in specifying engineered wood products, contact us:

APA HEADQUARTERS

7011 So. 19th St. ■ Tacoma, Washington 98466 ■ (253) 565-6600 ■ Fax: (253) 565-7265

PRODUCT SUPPORT HELP DESK

(253) 620-7400 ■ E-mail Address: help@apawood.org

DISCLAIMER

The information contained herein is based on APA – The Engineered Wood Association's continuing programs of laboratory testing, product research and comprehensive field experience. Neither APA, nor its members make any warranty, expressed or implied, or assume any legal liability or responsibility for the use, application of, and/or reference to opinions, findings, conclusions or recommendations included in this publication. Consult your local jurisdiction or design professional to assure compliance with code, construction and performance requirements. Because APA has no control over quality of workmanship or the conditions under which engineered wood products are used, it cannot accept responsibility for product performance or designs as actually constructed.

Form No. Z725C/Revised June 2011



REPRESENTING THE ENGINEERED WOOD INDUSTRY